

INSTALLATION INSTRUCTIONS



AZE 100 P

Noise values in exhaust air flow

- ① free opening 90°
- ② free opening 135°
- ③ free opening 180°
- ④ free opening 270°

Noise values in supply air flow

- ① free opening 90°
- ② free opening 135°
- ③ free opening 180°
- ④ free opening 270°

Setting the air flow

The air flow can be changed without tools. The free opening is positioned in the air flow for this purpose.