


# INSTALLATION INSTRUCTIONS

## DRH 31-12 R


### Installation position in the duct system

The illustration shows the installation of the electrical air heater in the ventilation system. In particular, the usage of components (temperature sensor, differential pressure controller) is shown.

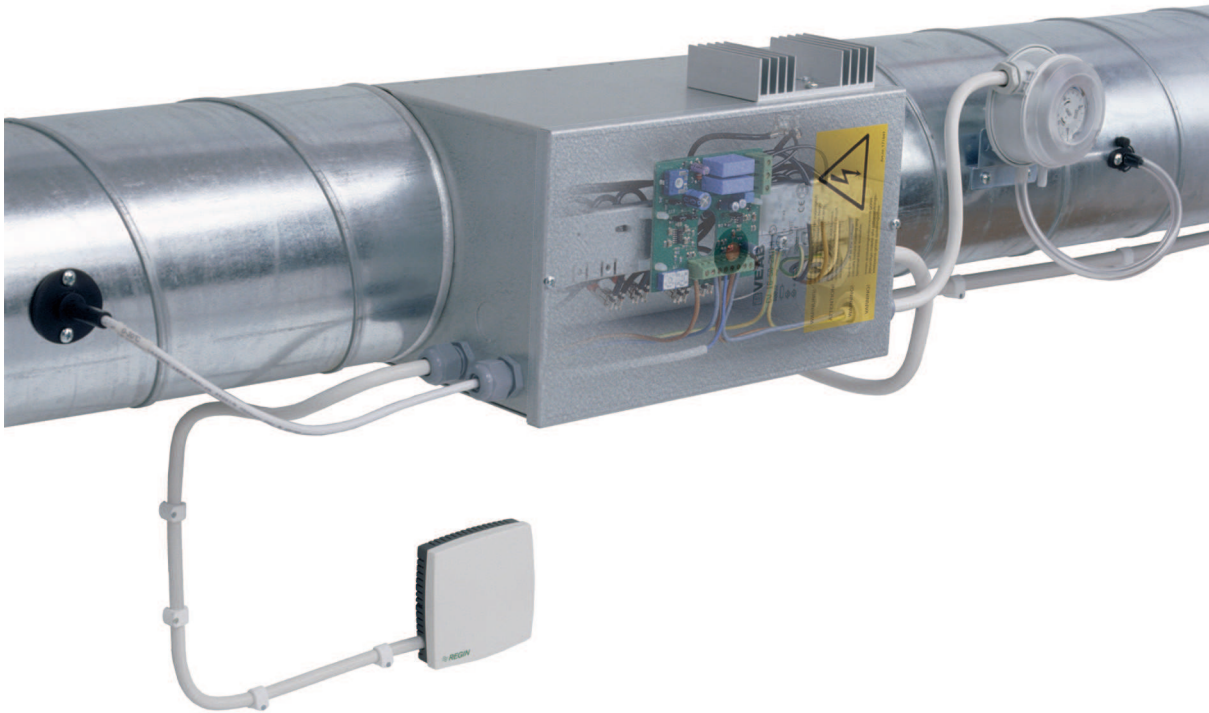

- ① FL 30 P - channel sensor (included in the scope of delivery)
- ② FR 30 P - room sensor (included in the scope of delivery)
- ③ Electrical air heater with integrated controller
- ④ DW 1000 differential pressure controller
- ⑤ Duct

### Constant room temperature with FR 30 P room sensor and FL 30 P channel sensor

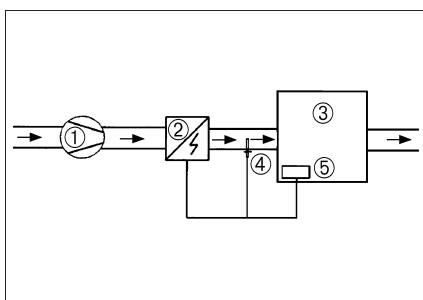

- ① Fans
- ② Electrical air heater with integrated controller
- ③ Room
- ④ FL 30 P channel sensor
- ⑤ FR 30 P room sensor