


INSTALLATION INSTRUCTIONS



DSQ 50/6 K

Variable installation of ventilation sockets for ESQ K / DSQ K Quickboxes

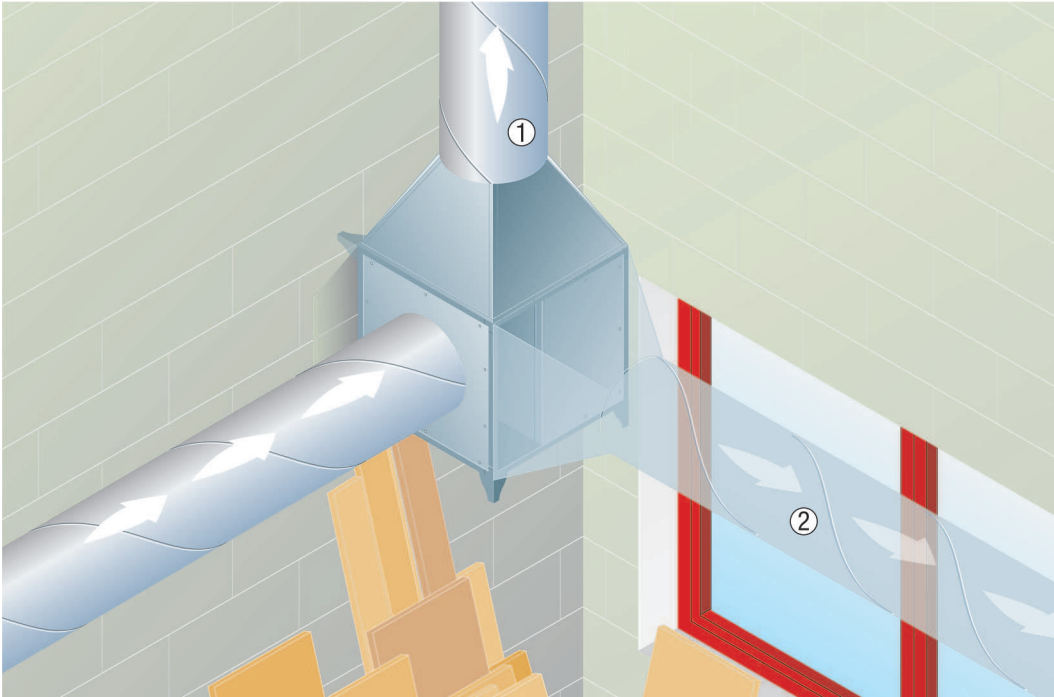

1 - 2 Variable installation directions