


# INSTALLATION INSTRUCTIONS

## DZF 35/6 BH

### Wall installation, wall thickness < 350 mm


- The illustration shows a DZF fan in a wall with a wall thickness of less than 350 mm. The AIROTHERM system can also be mounted in the reverse installation position with the impeller facing outwards.
- Install a compensating frame when the wall thickness is less than 350 mm (including plaster).

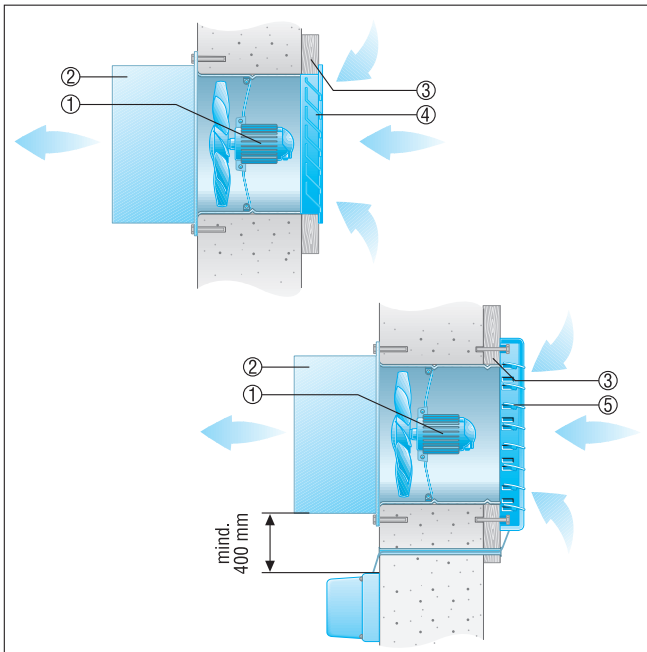

- ① DZF fan
- ② DTH fresh air heater
- ③ Compensating frame, to be supplied by the customer
- ④ Fixed external grille
- ⑤ Electrical shutter

### Wall installation, wall thickness 350 mm

- The illustration shows a DZF fan in a wall with a wall thickness of more than 350 mm. The AIROTHERM system can also be mounted in the reverse installation position with the impeller facing outwards.

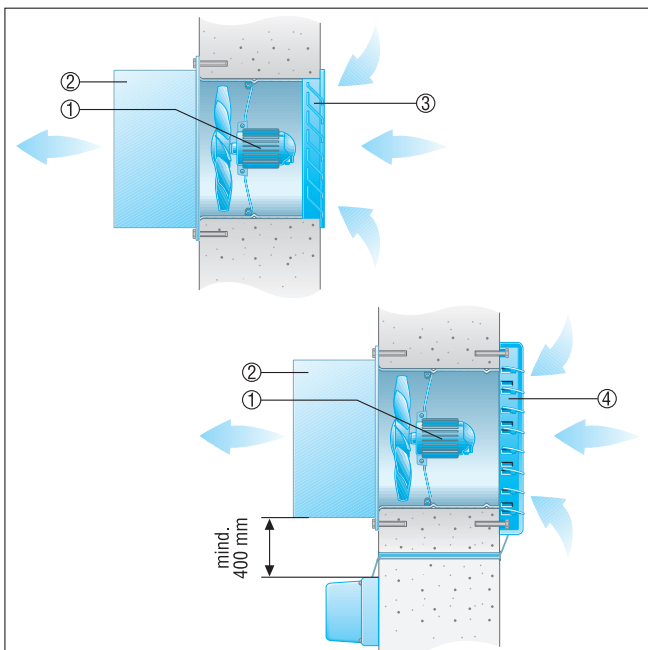

# INSTALLATION INSTRUCTIONS



## DZF 35/6 BH

- ① DZF fan
- ② DTH fresh air heater
- ③ Fixed external grille
- ④ Electrical shutter