

# INSTALLATION INSTRUCTIONS



## DZR 25/2 B Ex t

### Installation in ventilation duct

- Recommended distance to the next fitting is at least 3-5 x the duct diameter "D"
- If the cross-section narrows: Duct diameter "d" = max. 0.75 x duct diameter "D", angle of inclination 6-8°
  - ① Shutter, airstream-operated
  - ② Exterior wall
  - ③ Ventilation duct, to be provided by the customer
  - ④ ELA..-Ex flexible coupling
  - ⑤ Fan
  - ⑥ FU mounting feet (1 set)
  - ⑦ GP.. vibration damper
  - ⑧ Bracket, provided by the customer