

INSTALLATION INSTRUCTIONS



DZR 60/6 B Ex t

Installation in ventilation duct

- Recommended distance to the next fitting is at least 3-5 x the duct diameter "D"
- If the cross-section narrows: Duct diameter "d" = max. 0.75 x duct diameter "D", angle of inclination 6-8°
 - ① Shutter, airstream-operated
 - ② Exterior wall
 - ③ Ventilation duct, to be provided by the customer
 - ④ ELA..-Ex flexible coupling
 - ⑤ Fan
 - ⑥ FU mounting feet (1 set)
 - ⑦ GP.. vibration damper
 - ⑧ Bracket, provided by the customer