


ECR-A 16

ECR supply and exhaust air system with integrated air heater and filter.


- **Matched to one another** - Supply and exhaust air box with synchronised air volumes.
- **Convenient control** - Supply and exhaust air boxes can be set using a shared remote control.
- **Pre-assembled** - Supply air unit with fan, electric air heater, filter and controller. Makes fast and error-free installation possible.
- **Tempered** - With pluggable, continuous controller. For constant, pleasantly temperate supply air, even in winter.
- **Quiet** - Double-wall, sound insulated housing. For high demands for low noise levels and high levels of thermal insulation.
- **"Point-of-use"** - Can be used directly in the lounge, e.g. in suspended ceilings.
- **Simple** - Filter can be changed in seconds, without tools.
- **Can be combined in any way** - Supply and exhaust air boxes can be used in tandem and on their own.

ECR compact box and ECR-A exhaust air box in tandem

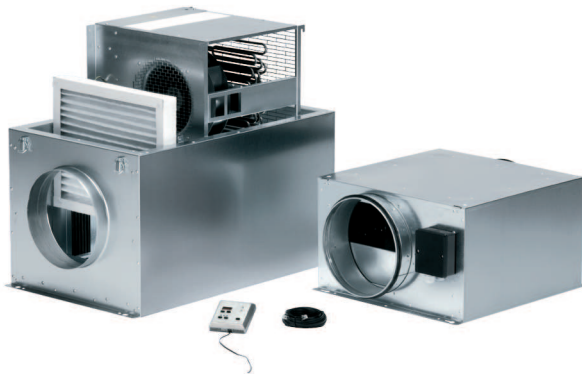

INSTALLATION INSTRUCTIONS

ECR-A 16

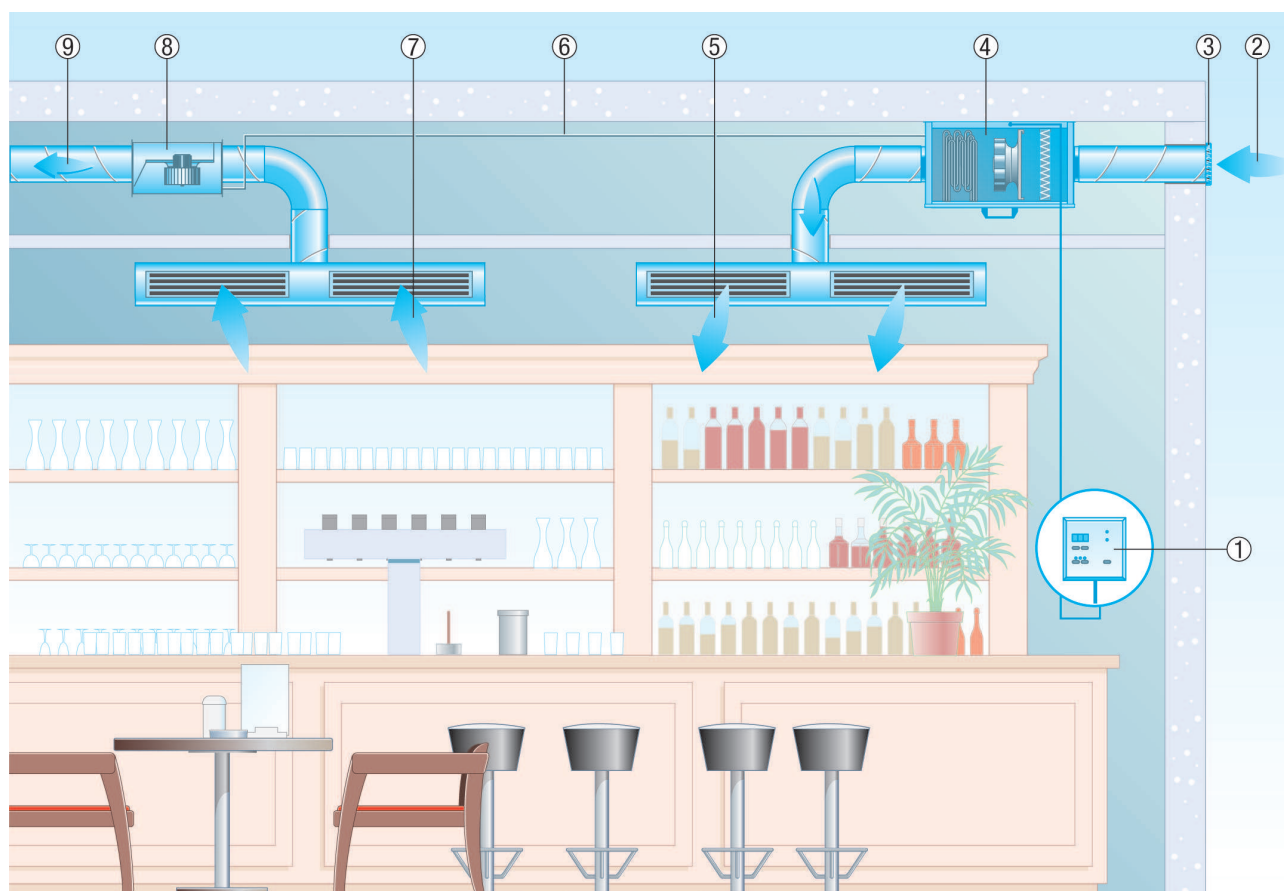

- ① Remote control
- ② Outside air
- ③ Lamella protective grille
- ④ ECR Compact Box
- ⑤ Supply air
- ⑥ Mains and control cable
- ⑦ Exhaust air
- ⑧ ECR-A Exhaust air box
- ⑨ Outgoing air