


INSTALLATION INSTRUCTIONS



ESQ 40/4 K

Variable installation of ventilation sockets for ESQ K / DSQ K Quickboxes

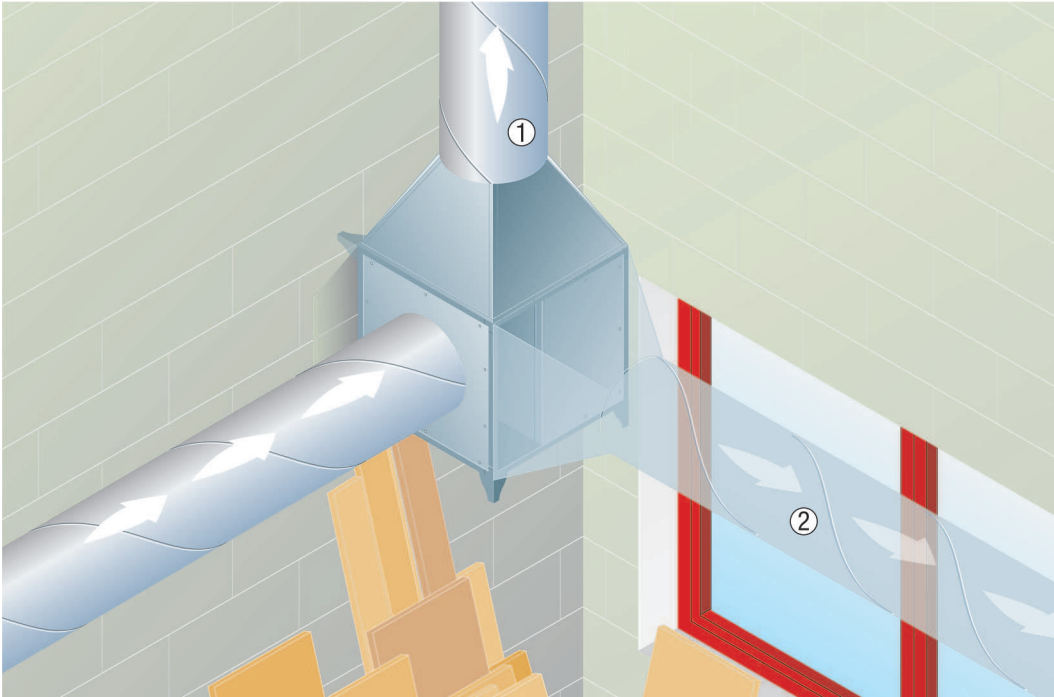

1 - 2 Variable installation directions