

# INSTALLATION INSTRUCTIONS



## ZWVQ 10

### Adjustment

- The volumetric flow is determined by measuring the pressure different over the adaptor holes. Adjustment can be done by changing the number of open holes.
- The insertion loss is also dependent on the number of open rows of holes:

### Insulation loss D in dB

Open rows of holes	63 Hz	125 Hz	250 Hz	500 Hz	1,000 Hz	2,000 Hz	4,000 Hz	8,000 Hz
14	19	13	8	0	0	1	3	3
8	19	13	7	0	0	4	5	5
2	19	14	7	7	10	7	9	12