

INSTALLATION INSTRUCTIONS



ZWVQ 12

Adjustment

- The volumetric flow is determined by measuring the pressure different over the adaptor holes. Adjustment can be done by changing the number of open holes.
- The insertion loss is also dependent on the number of open rows of holes:

Insertion loss De in dB

Open rows of holes	63 Hz	125 Hz	250 Hz	500 Hz	1,000 Hz	2,000 Hz	4,000 Hz	8,000 Hz
14	17	12	6	0	0	1	2	3
8	17	12	6	1	2	4	5	5
2	19	14	8	8	10	7	10	11