



BK 25

ENR 20, ENR 25, ENR 31 with on/off switch and three-position switch

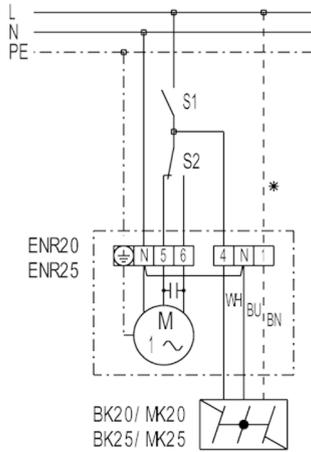

- S1 - On / Off
- S2 - Switching between air extraction and ventilation
- Terminal 5 - Air extraction
- Terminal 6 - Ventilation
- * - duct only for MK... shutter

BK with EN... wall fan, without speed control

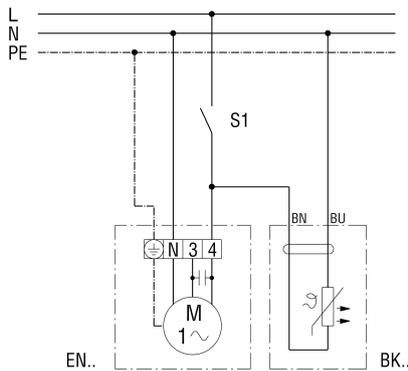


S1 fan On/Off, to be supplied by the customer

WIRING DIAGRAM

BK 25

BK with EN... wall fan, without speed control

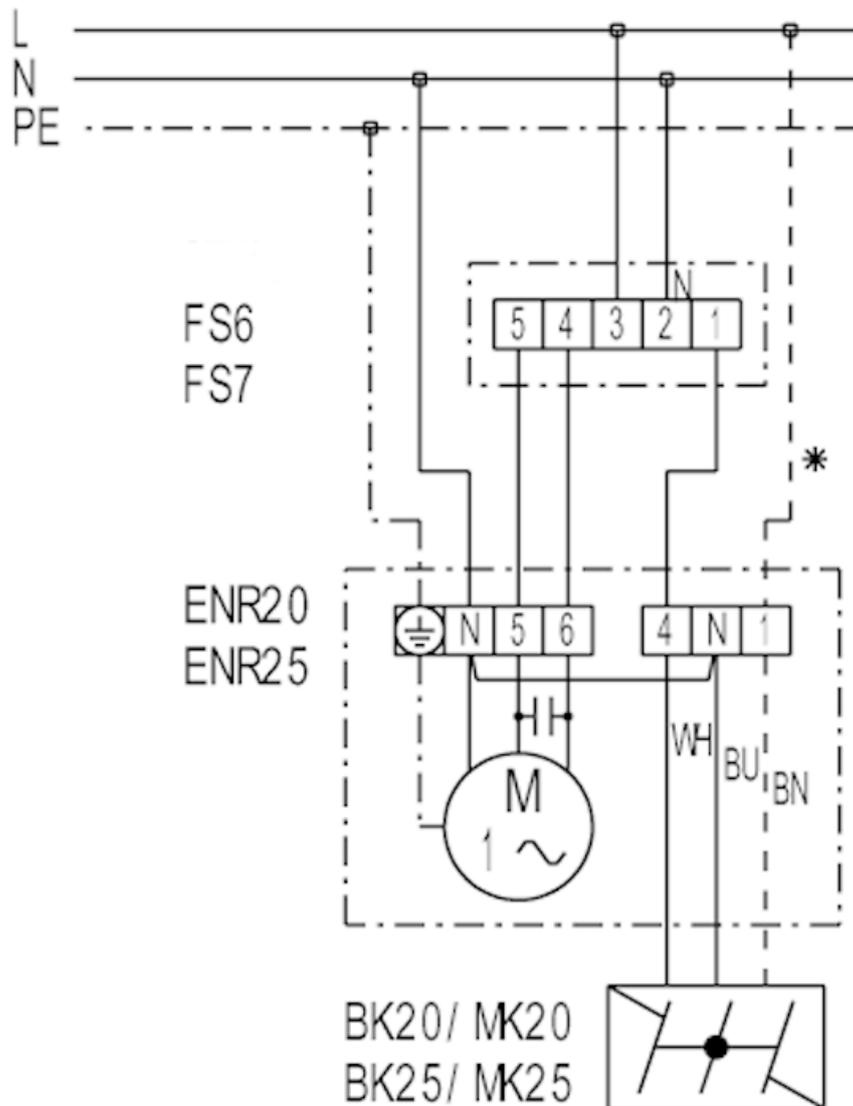


S1 fan On/Off, to be supplied by the customer

WIRING DIAGRAM


BK 25

ENR 20, ENR 25, ENR 31 with W 1, WU 1 reversing switch

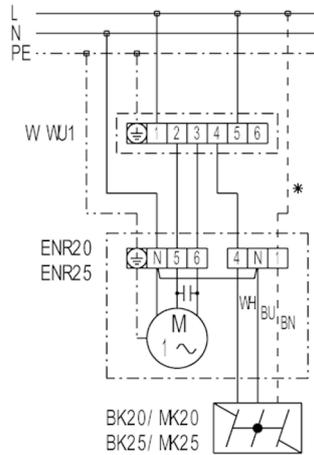


- W 1 - Reversing switch (air extraction or ventilation), surface-mounted
- WU 1 - Reversing switch (air extraction or ventilation), recessed-mounted
- * - duct only for MK... shutter

BK with ENR... fan and STW 2,5 speed controller for surface installation

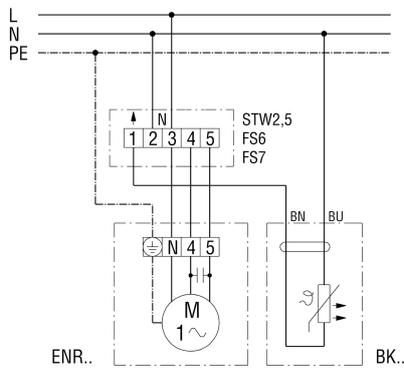


- FS6 - Step switch: 2 speeds, ventilation / air extraction (FS 6 cannot be used for ENR 31)
- FS7 - Step switch: Ventilation / air extraction

BK with ENR... fan and STW 2,5 speed controller for surface installation

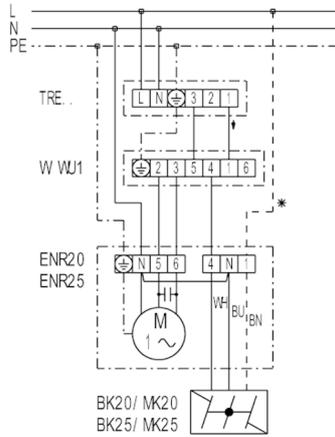

FS6 - Step switch: 2 speeds, ventilation / air extraction (FS 6 cannot be used for ENR 31)
 FS7 - Step switch: Ventilation / air extraction

ENR 20, ENR 25, ENR 31 with TRE 5-step transformer and three-position switch

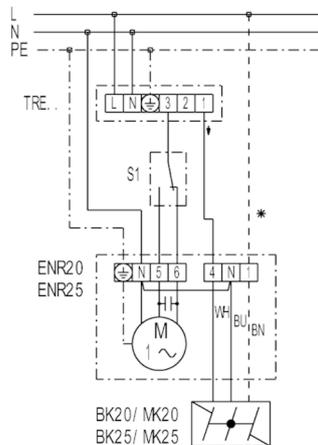


TRE - 5-step transformer (on/off, 5-speed)
 S1 - Reversing switch (air extraction or ventilation)
 * - duct only for MK... shutter

WIRING DIAGRAM

BK 25



ENR 20, ENR 25, ENR 31 with TRE..S 5-step transformer and ESS 20 5-step switch.

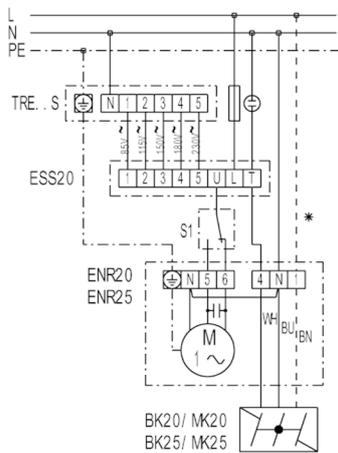

TRE - 5-step transformer, control cabinet installation

ESS 20 - 5-step switch (on/off, 5-speed)

S1 - Reversing switch (air extraction or ventilation)

* - duct only for MK... shutter