


WIRING DIAGRAM

ECR-A 12

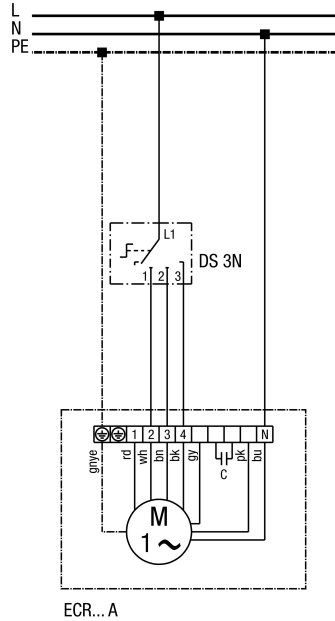

ECR...-A with DS 3N



DS 3N - 3-step switch
Terminals 1-4 are the motor's windings.
Assignment of terminals by way of example:
Minimum speed (terminal 1) is not used here.