


# WIRING DIAGRAM

## ECR-A 16



### ECR...-A with DS 3N

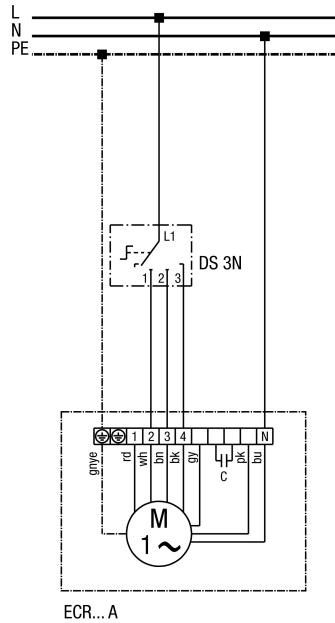

DS 3N - 3-step switch  
Terminals 1-4 are the motor's windings.  
Assignment of terminals by way of example:  
Minimum speed (terminal 1) is not used here.