


WIRING DIAGRAM

ECR 12

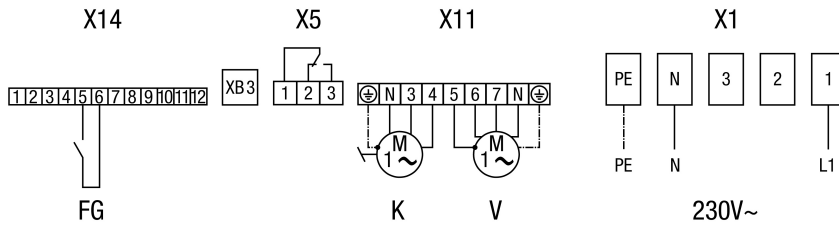

- FG - Unit release
 - XB3 - Operating panel
 - X5 - Unit fault
 - K - Shutter drive
 - V - Exhaust air fan
 - X11-3 - Open
 - X11-4 - Closed
 - X11-5 - Slow
 - X11-6 - Medium
 - X11-7 - Fast
-