


WIRING DIAGRAM

ER-AP 60 G

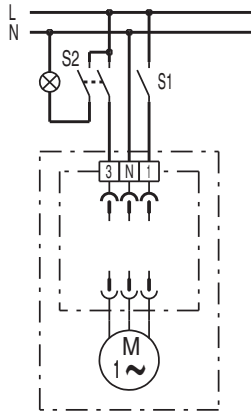

S1 = Base load (low speed)
S2 = Full load (high speed)
