


# WIRING DIAGRAM

## ER-AP 60 G

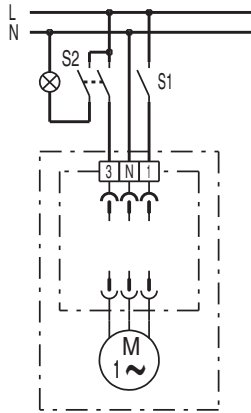

S1 = Base load (low speed)  
S2 = Full load (high speed)

---