


WIRING DIAGRAM

WRG 300 WPK

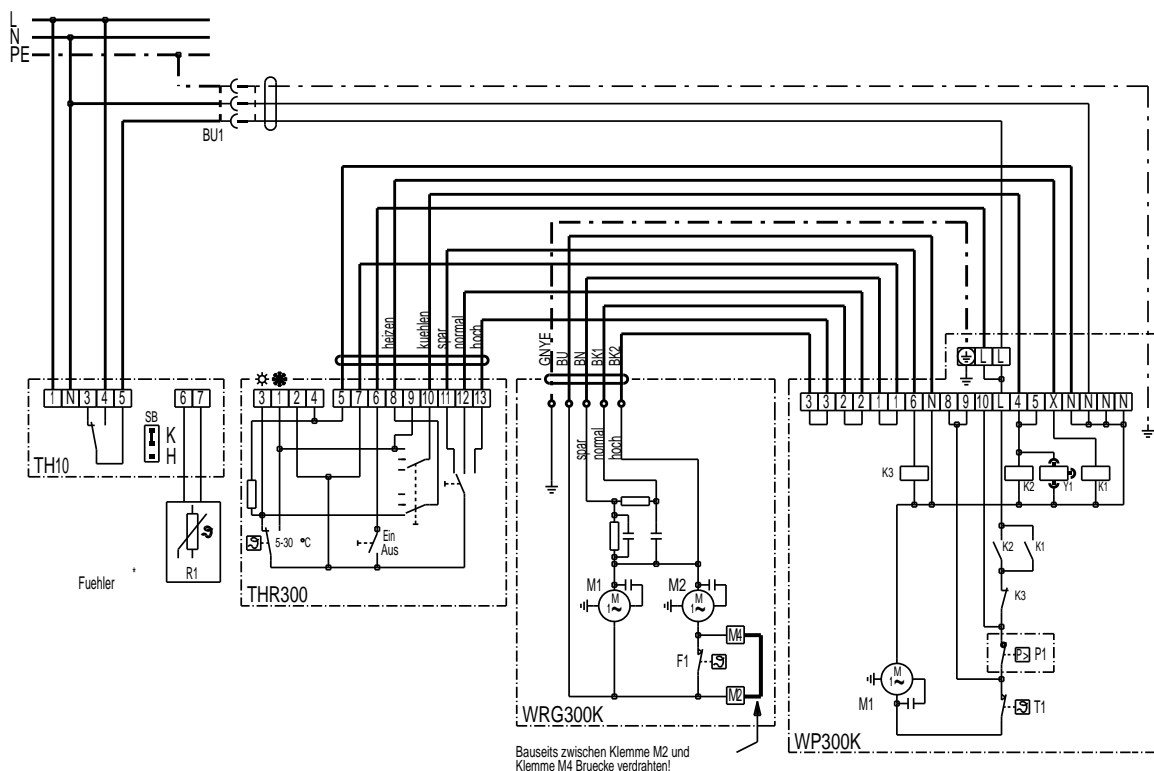

- TH 10 thermostat: Anti-frost protection fuse
- THR300 step switch (contained in scope of delivery)
- R1 Outside air sensor (supply temperature). Installation: outside air duct, close to the outside wall / north side
- WRG 300 K Heat recovery unit
- M1 Exhaust air fan
- M2 Supply air fan
- F1 Anti-frost protection fuse. In the WRG 300 system, this must be supplied by the customer, bridged to terminals M2 and M4. See WRG 300 K wiring diagram
- WP 300 K Heat pump
- P1 Pressostat (high pressure fuse)
- T1 Anti-frost protection fuse (vaporiser)
- Y1 Cooling / heating change over valve
- M1 Compressor
- BU1 safety plug (supplied by the customer)
- Terminals M2 and M4 must be bridged by the customer