



EPK 28/6 B

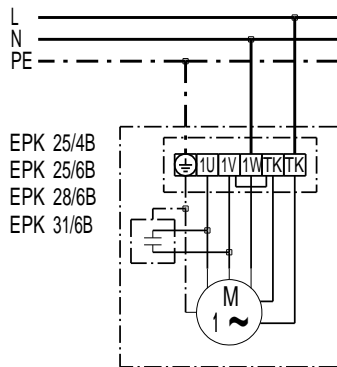


EPK 28/6 B

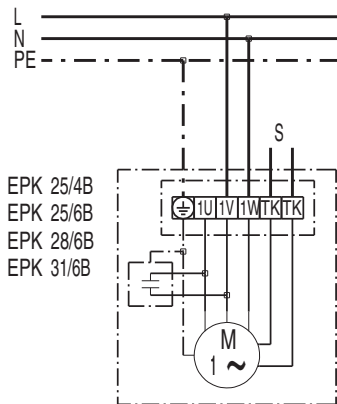


S = vezérlőáramkör hibajelzéshez


EPK 28/6 B

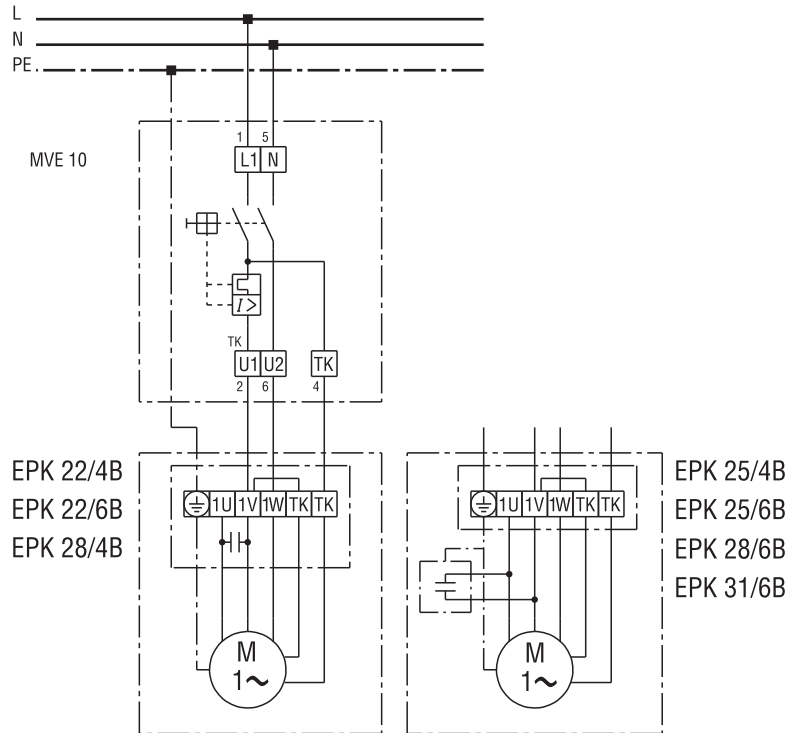

EPK 28/6 B

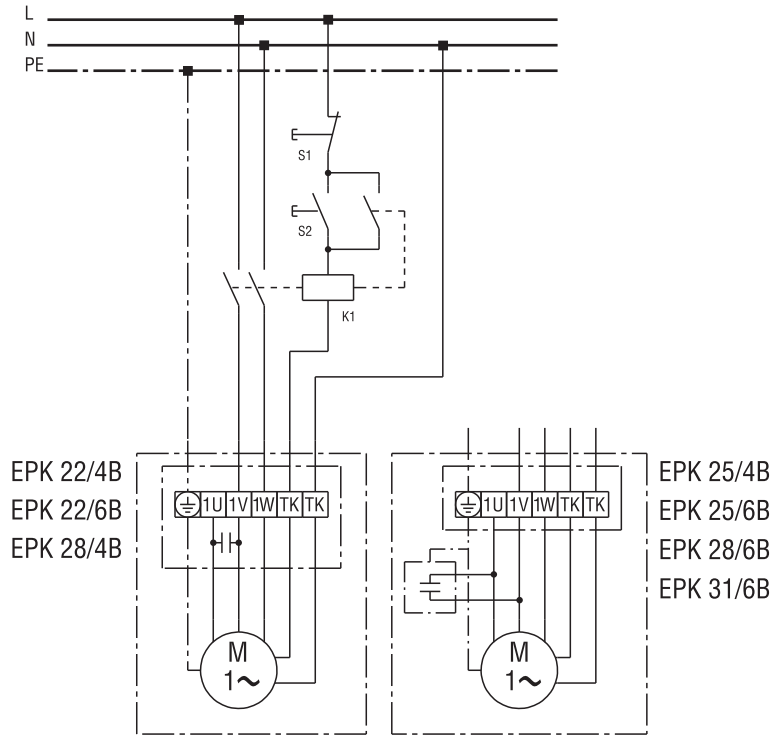

EPK 28/6 B

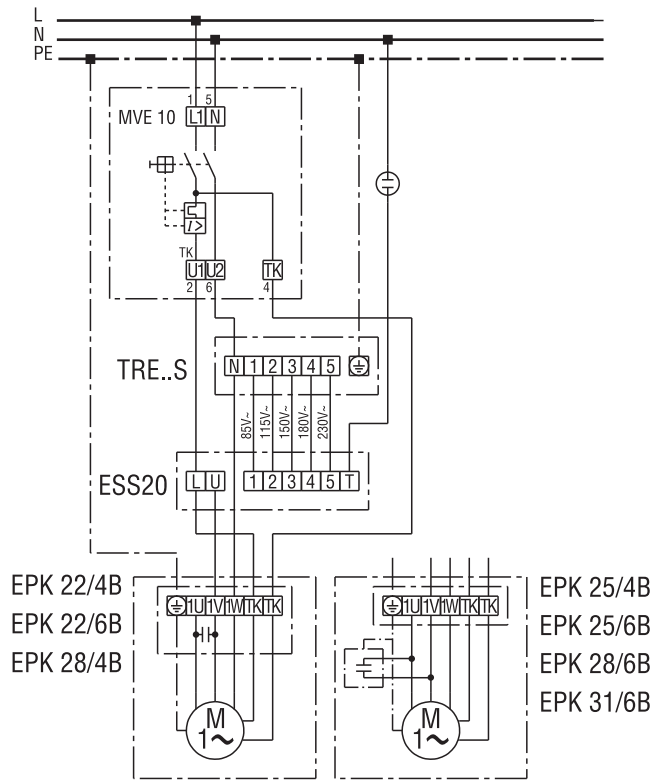

EPK 28/6 B

